


MODUL



www.blum.com

 **blum**®


MODUL

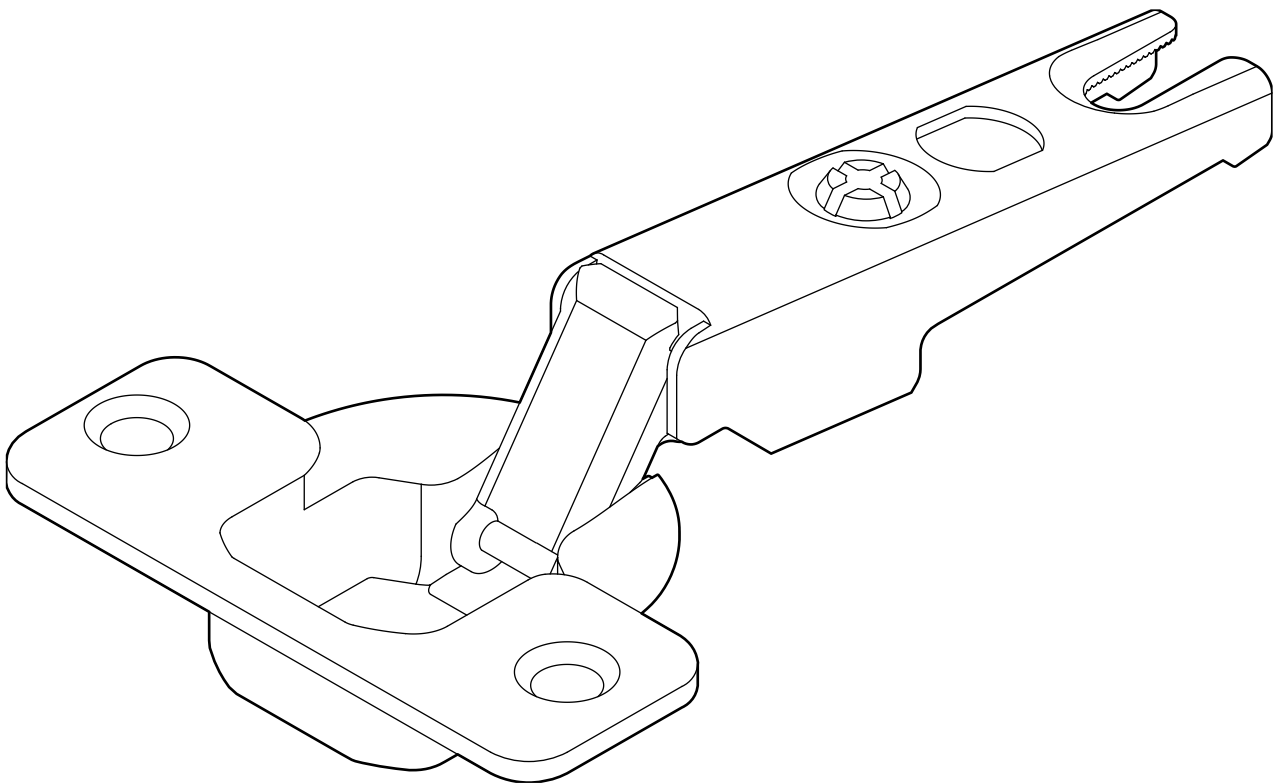


Standardanwendungen | Standard applications | Applications standard | Applicazioni standard | Aplicaciones estándar |
Rozwiązania standardowe | Стандартные конструкции

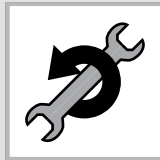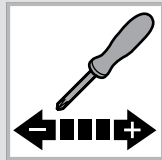

Planung | Planning | Planification |
Progettazione | Planificación |
Planowanie | Проектирование




Anschrauben | Screw-on | A visser |
Da avvitare | Para atornillar |
Przykręcanie | Привинчивание




Eckanschlag | Overlay application |
Porte en applique | Battuta con
sormonto | Tope de esquina |
Drzwi nakładane | Накладная дверь



Montage | Assembly | Montage |
Montaggio | Montaje | Montaž |
Монтаж




Einpressen | Knock-in | A frapper |
Inserimento a pressione |
Para presión | Wprasowywać |
Запрессовывать




Mittelanschlag | Dual application |
Portes jumelées | Battuta mediana |
Tope central | Drzwi bliźniacze |
Полунакладная дверь



Einstellung | Adjustment | Réglage |
Regolazione | Ajuste | Regulacja |
Регулировка




EXPANDO




Innenanschlag | Inset application |
Porte encastrée | Battuta interna |
Tope interior | Drzwi wpuszczane |
Вкладная дверь



Demontage | Removal | Démontage |
Smontaggio | Desmontaje |
Demontaž | Демонтаж



Befestigungsschraube |
Fixing screw | Vis de fixation |
Vite di fissaggio | Tornillo de fijación |
Wkręt mocujący | Винт крепежный



Langloch | Elongated hole |
Trou oblong | Foro ovale |
Agujero oblongo | Otwór podłużny |
Продольное отверстие



Klickbar | Clickable | Cliquable |
Cliccabile | Se puede hacer clic |
Klikalny | Кликабельно



Nicht Klickbar | Not clickable |
Pas cliquable | Non cliccabile |
No se puede hacer clic |
Nie klikalny | Некликабельно






Zurück | Back | Retour | Indietro |
Hacia atrás | Wstecz | Назад


MODUL






i

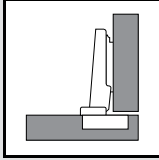


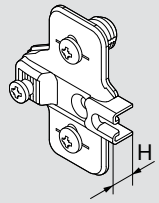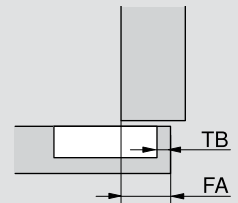 $H = H_0 + D$			
$H = H_0 = 8.3 / 9.2 \text{ mm}$ $D = 0 \text{ mm}$	$H = 11.3 / 12.2 \text{ mm}$ $D = 3 \text{ mm}$	$H = 18.2 \text{ mm}$ $D = 9 \text{ mm}$	
FA	FA	FA	TB
14 mm	11 mm	5 mm	3 mm
15 mm	12 mm	6 mm	4 mm
16 mm	13 mm	7 mm	5 mm
17 mm	14 mm	8 mm	6 mm

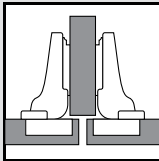

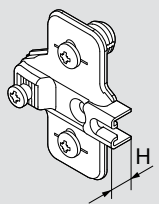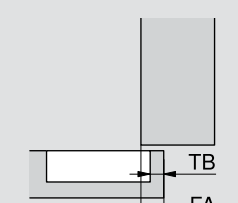
 $H = H_0 + D$			
$H = H_0 = 8.3 / 9.2 \text{ mm}$ $D = 0 \text{ mm}$	$H = 11.3 / 12.2 \text{ mm}$ $D = 3 \text{ mm}$	$H = 18.2 \text{ mm}$ $D = 9 \text{ mm}$	
FA	FA	FA	TB
4.5 mm	1.5	-4.5	3 mm
5.5 mm	2.5	-3.5	4 mm
6.5 mm	3.5	-2.5	5 mm
7.5 mm	4.5	-1.5	6 mm

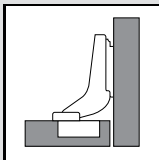


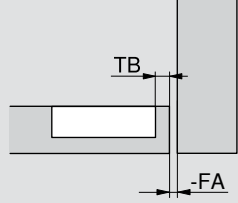
$D = 0 \text{ mm}$		
FA	TB	
-4 mm	3 mm	
-3 mm	4 mm	
-2 mm	5 mm	
-1 mm	6 mm	

MODUL

blum

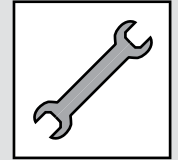


i

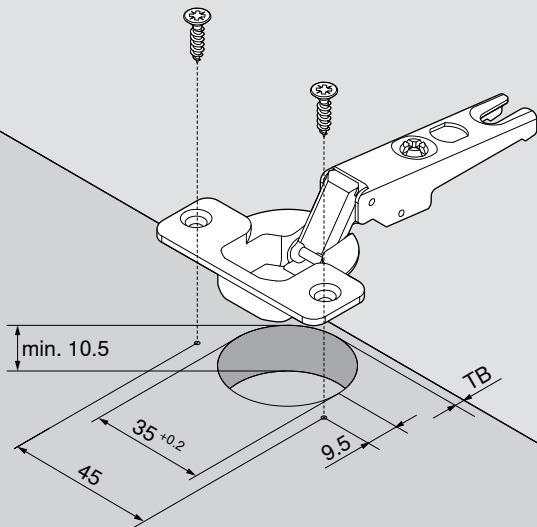
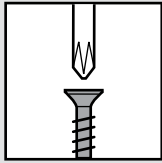


1


 (3.5 x 17 / 3.5 x 15)

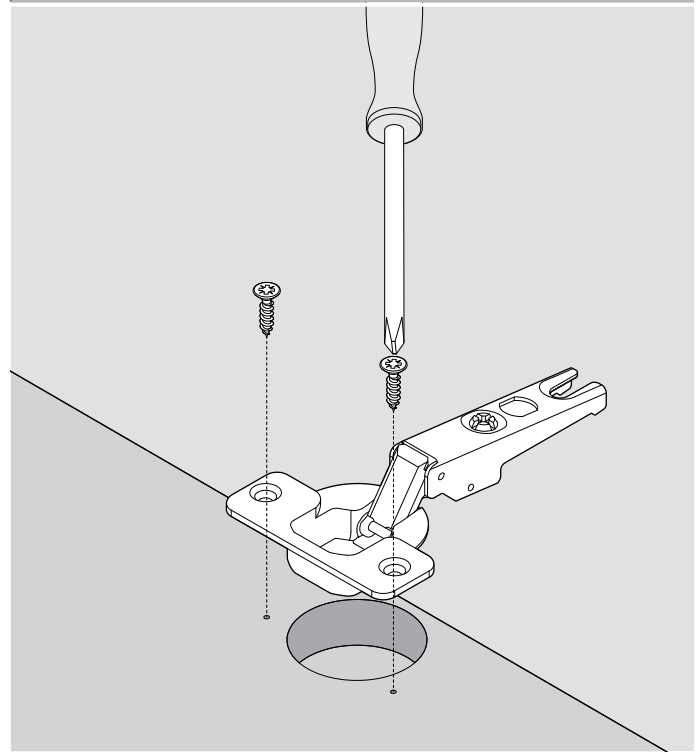

i

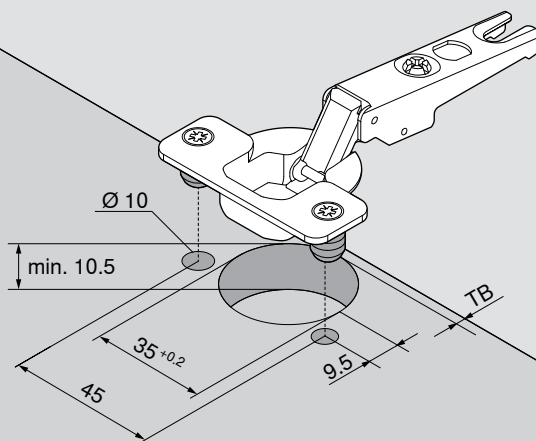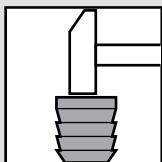


1

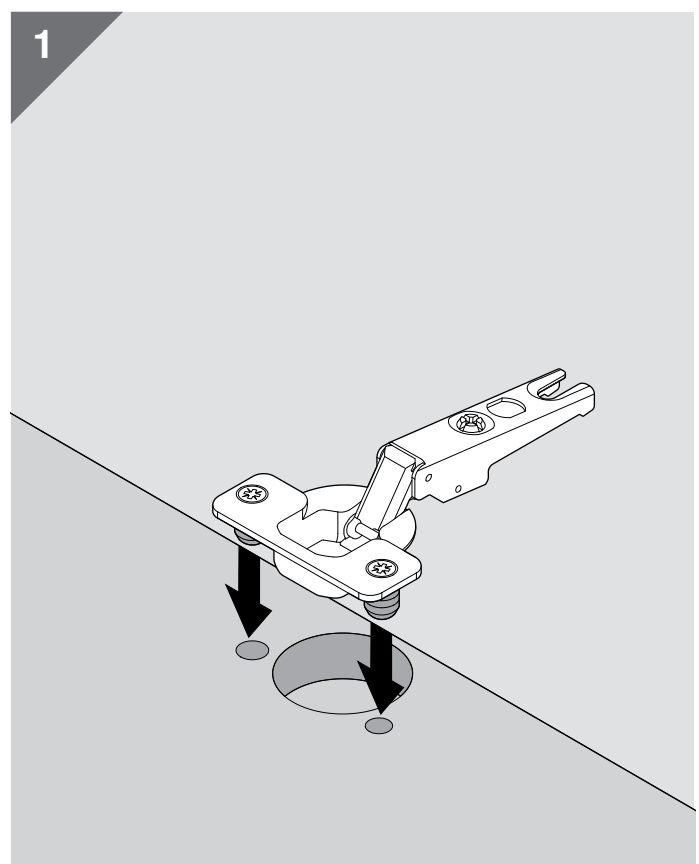


MODUL



blum

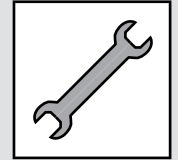

1





(3.5 x 17 / 3.5 x 15)

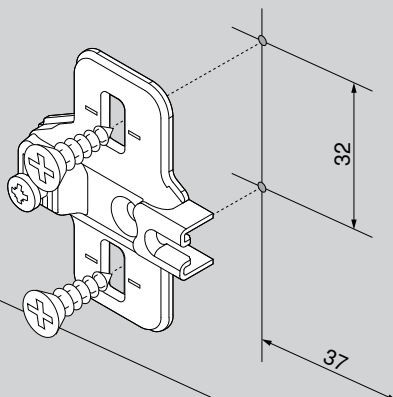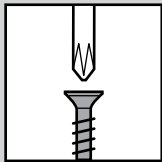



1



(6 x 14.5)

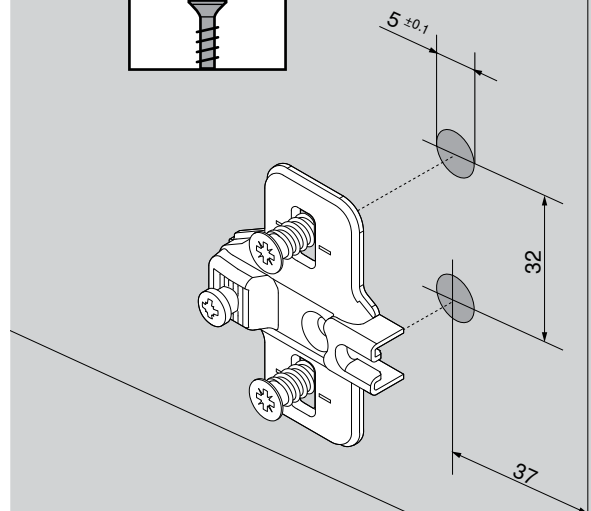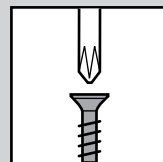

1

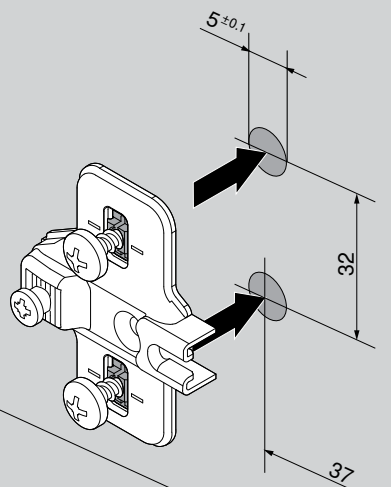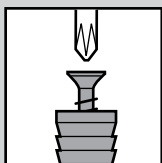


MODUL


 **blum**







1

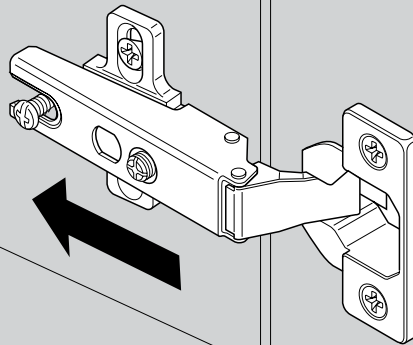

2

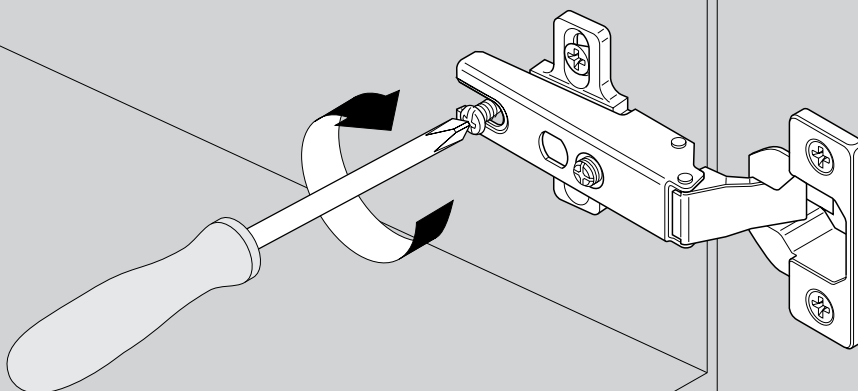


MODUL

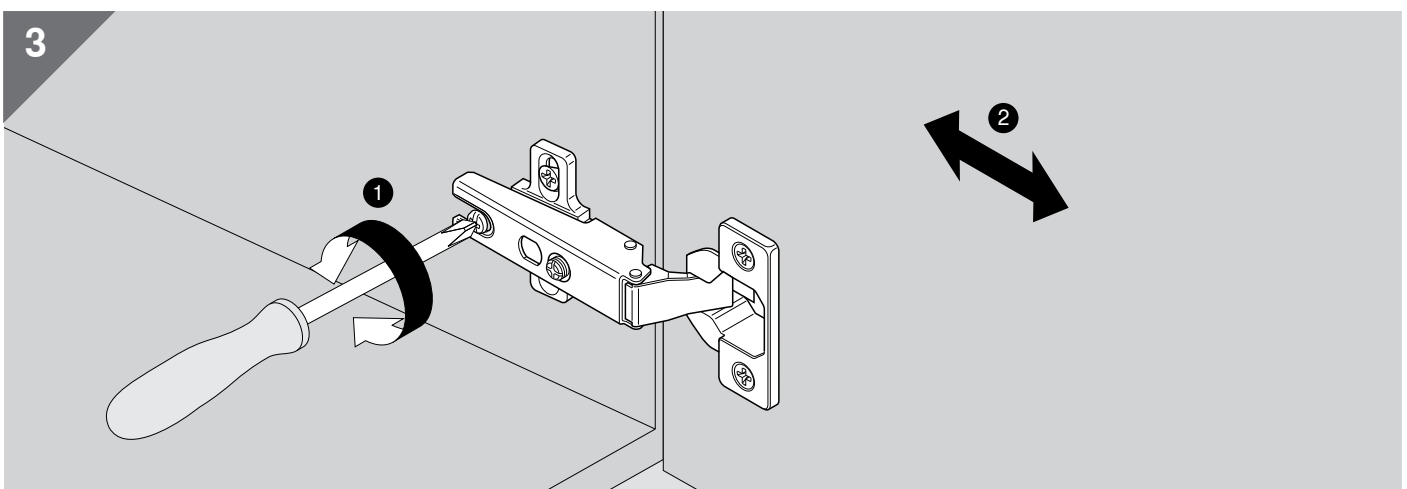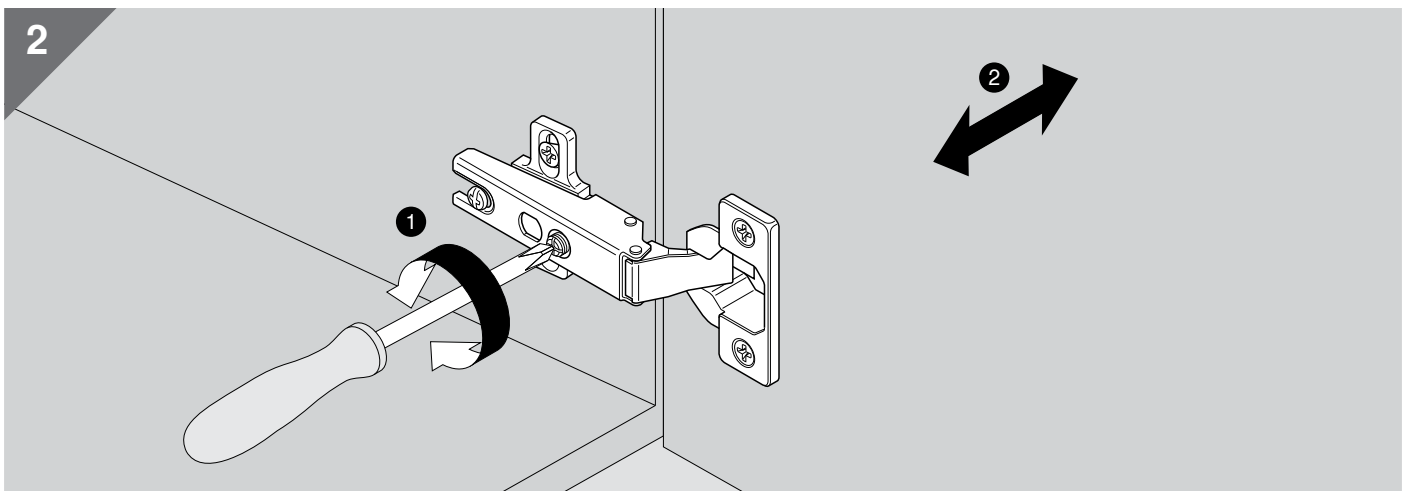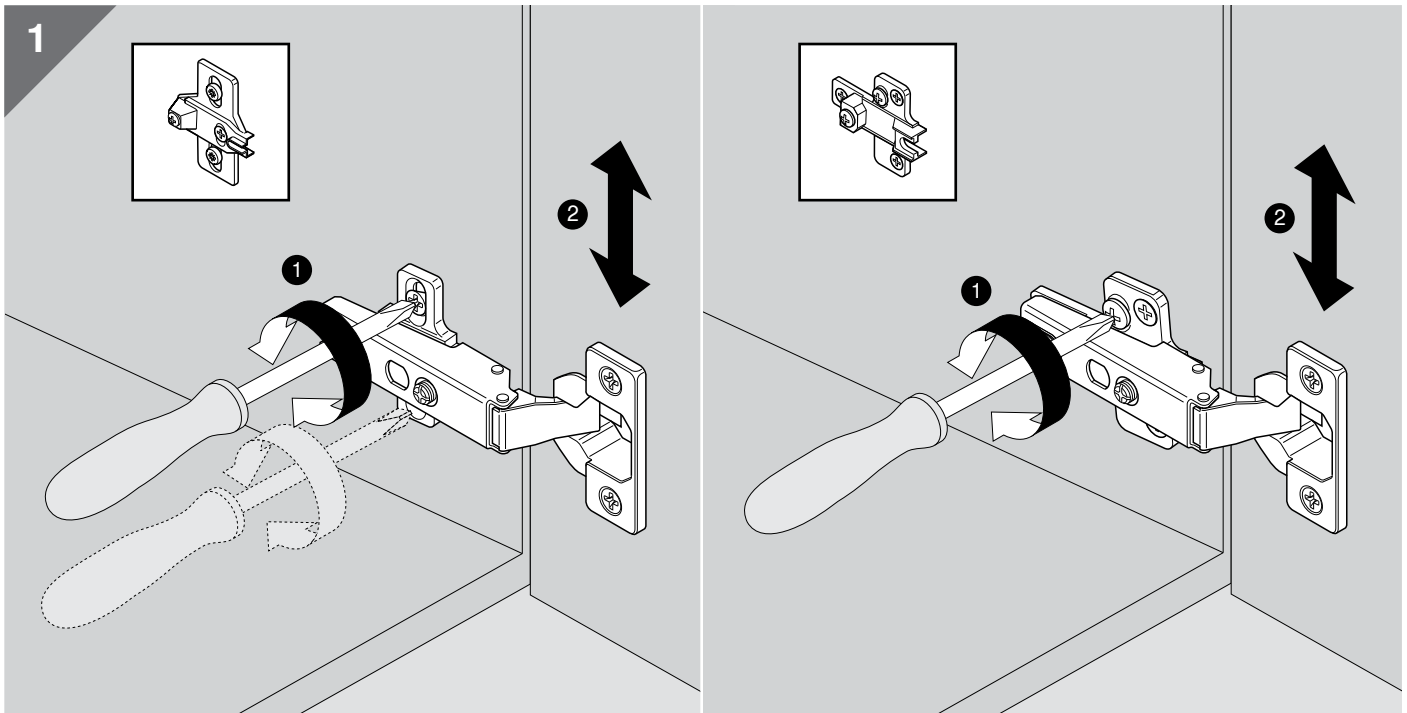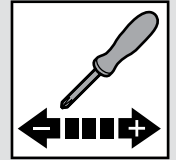


MODUL


 **blum**

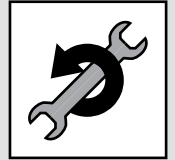

1

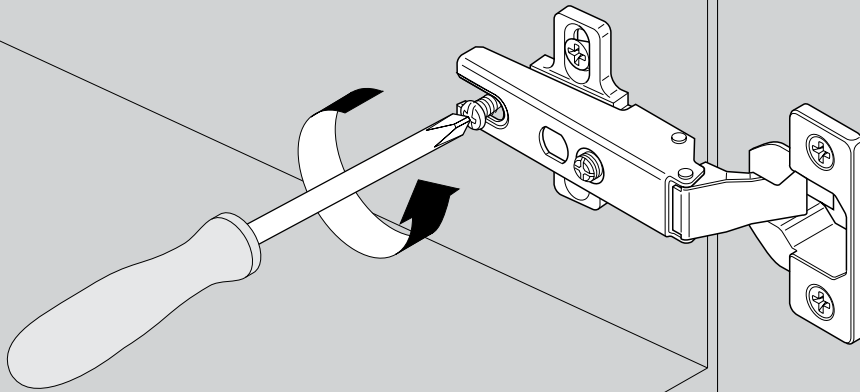

2

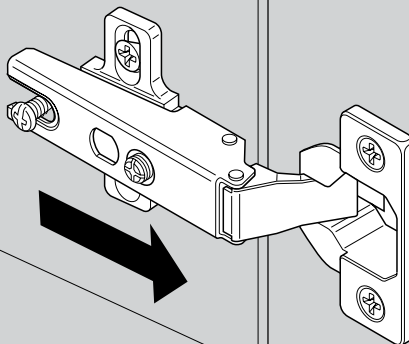

Julius Blum GmbH
Beschlägefabrik
6973 Höchst, Austria
Tel.: +43 5578 705-0
Fax: +43 5578 705-44
E-Mail: info@blum.com
www.blum.com

